NERVEN® German Technology


HELD
TUBULAR MOTOR

Company reserves the right to change product design and specifications without prior notice then, photos are for reference only. H12033 A/8

E Electric roller blind draft (If the accessory with "*" that mean could be OEM)




①Standared match 28 crown, install 38 crown

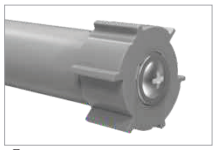
②Install 38 Adapt wheel

Choosable



1.Ready tube, and choose the prompt crown, adapt wheel and Idler.
2.Motor assembling (Install crown and adapt wheel first)
3.Then install tube and idler.
4.Install the tube to the motor bracket and Idler bracket.
5.Adjust the limit with limit setting method.

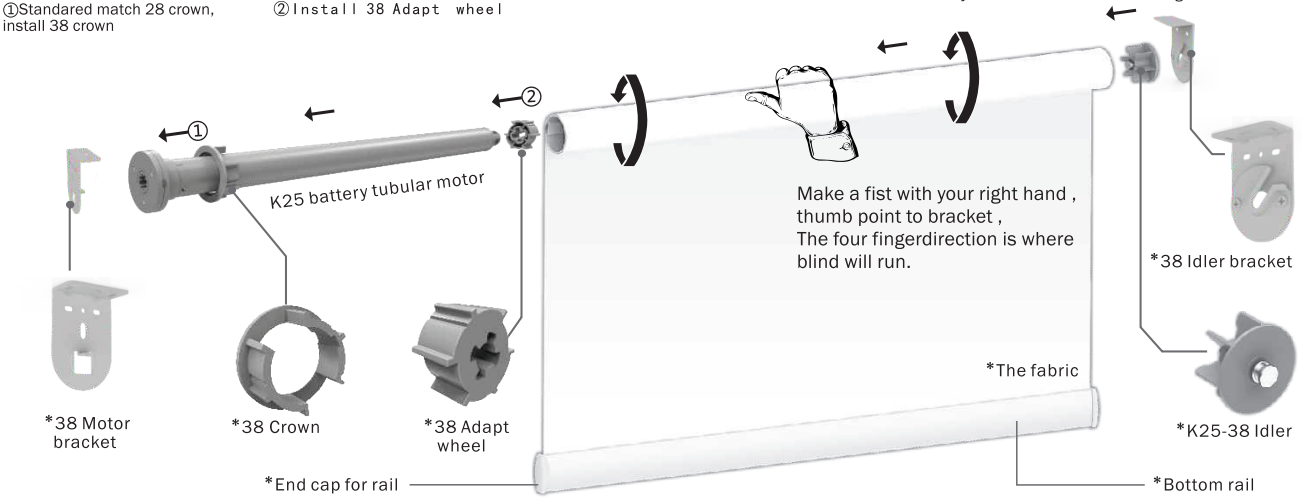


Note: This product does not support hand-pull function;Also use a dedicated transmitter with a " " icon or an L-tag.
Fully charge the product when not in use, and then recharge it every 12 months.

T Transmitter operating instructions


(*Take A13 button transmitter as an example,For other transmitters,please refer to the corresponding transmitter manual.)

Pairing transmitter and motor: Repeat the code pairing step to eliminate the current code. One motor can store up to 5 channels, adding a new channel will only cover the first channel.

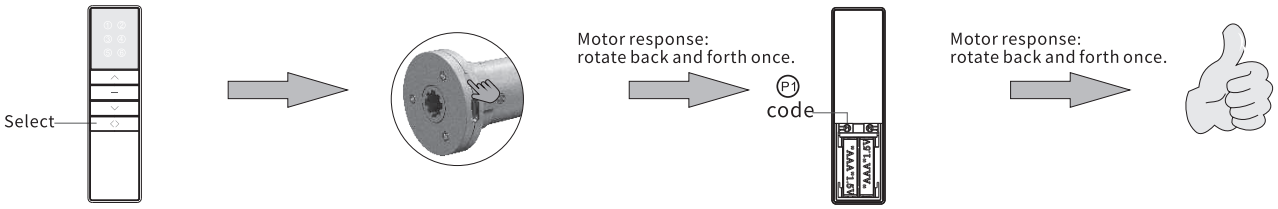


1、Select the channel that will be paired;
2、Press【Set】button on motor;
3、Within 10s after motor stops, press【Code】button;

Clear pairing： Clear all pairing on the motor:

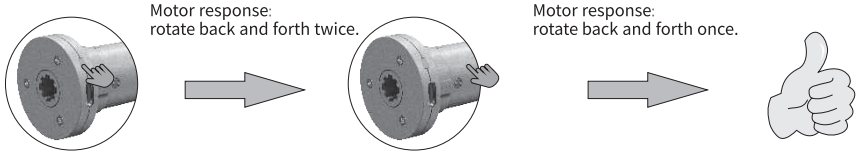


1、Press & Hold【Set】button on motor about 10s;
2、Press【Set】button on motor again;

Inching / Continuous moving interchange: Default is continuous moving. After switching to inching moving, press & hold【Up】or【Down】button about 2s, motor will continuously moves:

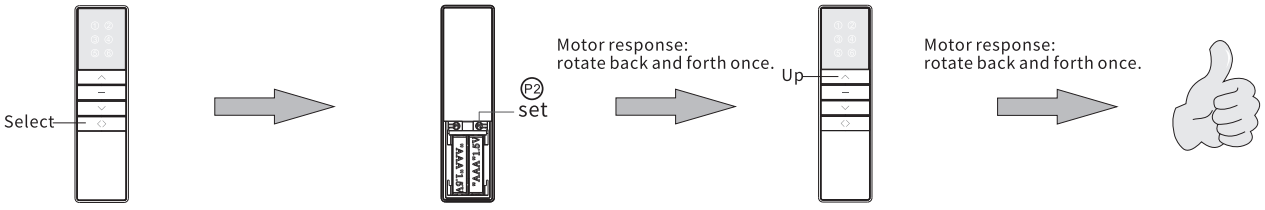


1、Select the channel that will be interchanged;
2、Press & Hold【Set】button on transmitter about 10s;
3、Within 10s after motor stops, press【Up】button about 5s;

Copy: Add a new channel to control motor。(No need to touch motor):

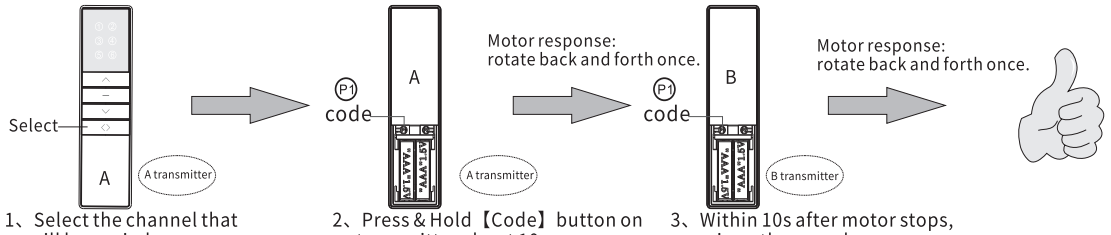


1、Select the channel that will be copied;
2、Press & Hold【Code】button on transmitter about 10s
3、Within 10s after motor stops, pair on the new channe;

Reset direction : Reset motor direction。Such as: before reset，press transmitter up button，blinds run down。After reset，press transmitter up button，blinds run up。

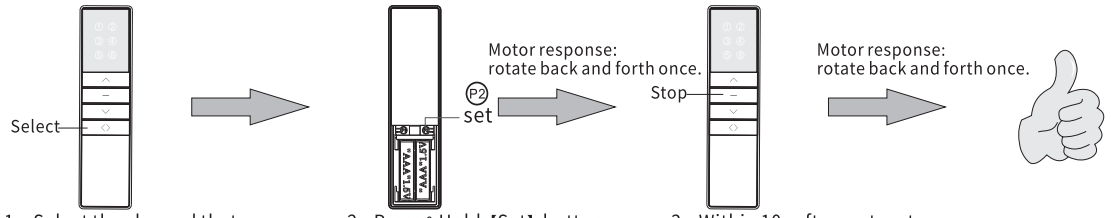


1、Select the channel that will be reset direction;
2、Press & Hold【Set】button on transmitter about 10s;
3、Within 10s after motor stops, press【Stop】button about 5s;


Adjusting Limits: When you press【Up】or【Down】button，the blinds will move up or down and stop automatically at the appointed position。

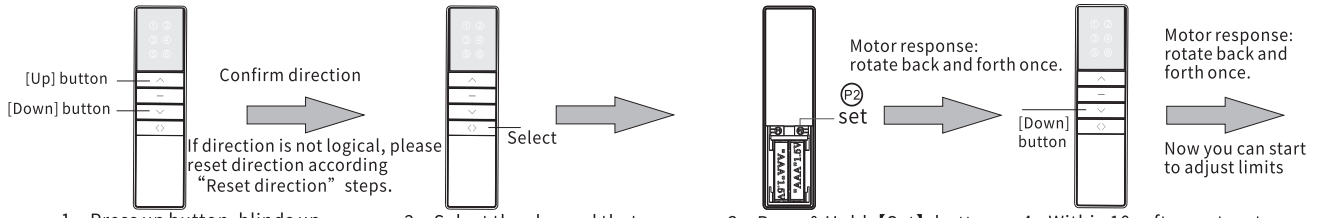

1、Press up button, blinds up. Press down button, blinds down;
2、Select the channel that will be used to adjust limits;
3、Press & Hold【Set】button on transmitter about 10s;
4、Within 10s after motor stops, press【Down】button about 5s;

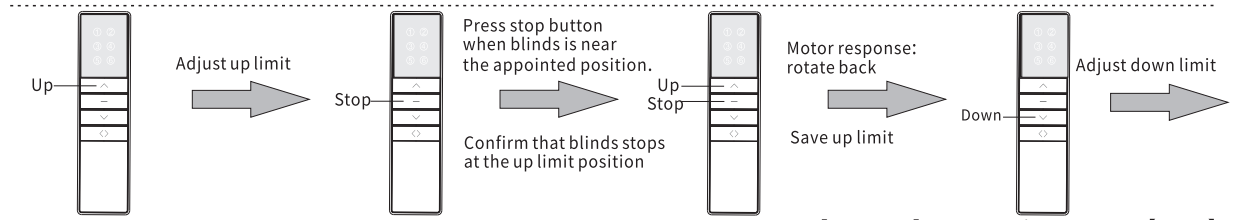


5、Within 10s press【Up】button to adjust up limit;
6、Press【Up/Down】button to move blinds, and then stop blinds at the appointed position;
7、Press & hold【Stop + Up】about 1s to save up limit;
8、Within 10s press【Down】button to adjust down limit ;

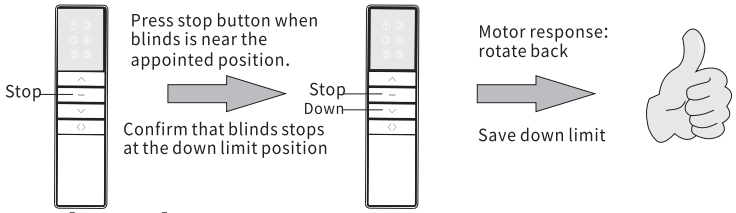


9、Press【Up/Down】button to move blinds, and then stop blinds at the appointed position;
10、Press & hold【Stop + Down】about 1s to save down limit;

Adjust the third limit : Repeat the operation once to eliminate the third limit:

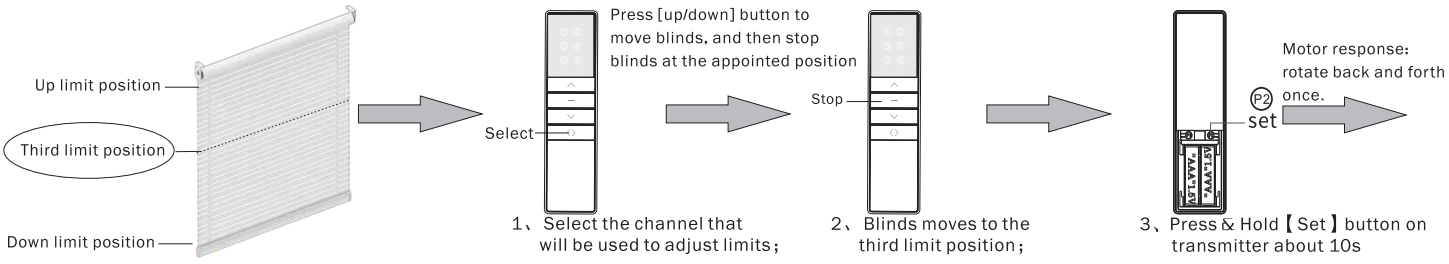

1、Select the channel that will be used to adjust limits;
2、Blinds moves to the third limit position;
3、Press & Hold【Set】button on transmitter about 10s

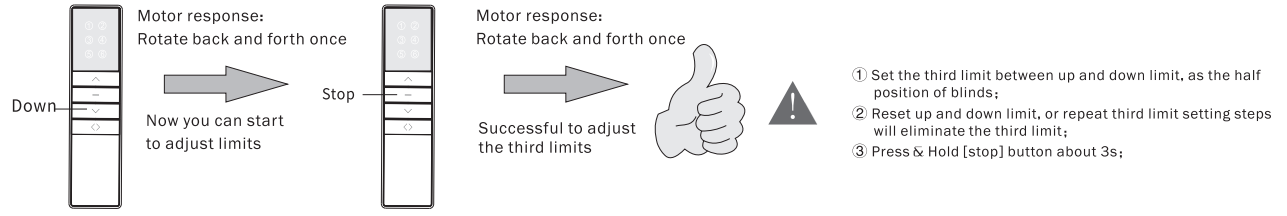

4、Within 10s after motor stops, press【Down】button about 5s;
5、Within 10s after motor stops, press【Stop】button about 5s;

① Set the third limit between up and down limit, as the half position of blinds;
② Reset up and down limit, or repeat third limit setting steps will eliminate the third limit;
③ Press & Hold [stop] button about 3s;